

Bergmann Messgeräte Entwicklung KG

Hagener Leite 24, 82418 Murnau, Germany Fon +49 8841 487769-0, Fax +49 8841 487769-9 tbergmann@bme-bergmann.de www.bme-bergmann.de

# Digital Delay/Pulse Generator Model BME\_SG08p



## **Features:**

- PCI-Card
- 6 Delays (SMB Output), with 25ps Delay Resolution and 44bit Delay-Range (max. Delaytime = 429s)
- Very low Jitter
- Max. Repetition Rate 15MHz
- Slope or Gate Output
- Master/Slave Option (if more than 6 Outputs are needed)
- high Load Option
- external/internal (modulo-N counter) Trigger
- external/internal clock
- Gate input
- Burst mode
- Delay Lists
- Remote controllable
- EPICS and ASCII interface




# **Description:**

The BME\_SG08p is a PCI card having 6 delay lines that can produce delayed signals from 0nsec to 419sec in steps of 25psec.

A trigger circuit starts the delay counters. There are 6 counters, A, B, C, D, E, F. In Pulse-Mode each programmed delay produces a pulse of specified length at its output connector, in Edge-Mode the first level transition is determined by the first programmed Delay - after the last Delay expires all outputs are reset together. In Gate-Mode the outputs A and B can be combined to form a gate signal, i.e. a rising(falling) edge after delay A has elapsed and a falling(rising) edge after delay B has elapsed, so you get an pulse with a variable (25ps resolution) pulsewidth from 2ns – 429s.

The trigger can be produced internally by a modulo-N counter or by an external signal. The signal connected to the external trigger input can also be used as external clock, and additionally can be gated and prescaled.

If more than 6 Outputs (or more than 3 Gate output) are needed, two or more cards can be connected together via a ribbon-cable, resulting in 12 or more synchronous delayed outputs.

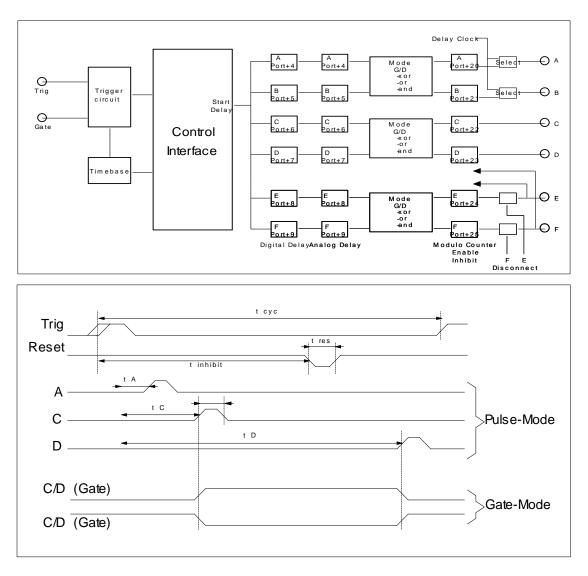



Hagener Leite 24, 82418 Murnau, Germany Fon +49 8841 487769-0, Fax +49 8841 487769-9 tbergmann@bme-bergmann.de www.bme-bergmann.de

# **General Specifications:**

## **Delays**

Delayrange:		0ns – 429s (44bit)	
Delayresolution:		25ps	
min. Delaytime:		<50ns (Insertion-Delay)	
Error:		<(1ns + 1ppm * delay)	$)^{2}$
<b>RMS</b> Jitter:	Output to Output	$<(50 \text{ps} + 10^{-8} * \text{delay})$	$)^{2}$
	Trigger to Output	$<(300 \text{ps} + 10^{-8} * \text{delay})$	

## Trigger, Gate

External: Internal:	Input Voltage Range: Threshold Range: Slope: Input impedance: Repetition rate: Burst Mode	-3.5V to 3.5V -2.5V to 2.5V in Steps of 1.2mV rising or falling edge $10k\Omega$ or $50\Omega$ by a modulo-N counter running with the main clock from 0.002Hz to 12MHz
Clock		
Internal:	Frequency: Accuracy:	160Mhz ) <sup>2</sup> 2ppm(0-70°C); T.C.: <1ppm/°C
External:	Frequency: Threshold Range:	max. 550Mhz with prescaler -2.5V to 2.5V

## Outputs A,B,C,D,E,F

Mode:		Slope or Gate (AB, G	CD, EF) output
Load:		$50\Omega \text{ or } 25\Omega$ ,	
Risetime:		<1.2ns for TTL	
Levels:	TTL:	0 to $4V$ ) <sup>1</sup>	normal or inverted

### **Interrupts**

can be fired with the finish of any of the delays A, B, C, D, E, F or after an auxiliary delay has finished. It is also possible to fire an interrupt with the main trigger of the delay generator(s), or after a fixed number of triggers has occurred.

### General

Master/Slave option set by jumper	r
Interface:	PCI bus
	signal compatibility 3.3V and 5V
Dimensions:	PC-Board 170x110 mm

1 5V amplitude available as an option

2 Accuracy and Jitter depend on clock source (specs with 1ppm TCXO clock source)

# Software:

C Library Labview DLL Standalone Control Program



Hagener Leite 24, 82418 Murnau, Germany Fon +49 8841 487769-0, Fax +49 8841 487769-9 tbergmann@bme-bergmann.de www.bme-bergmann.de

# **Application:**

#### Jitter-Free Control of a Femtosecond Lasersystem

Shown below is typical example of a fs-laser system, an oscillator with two amplifiers, the first stage running at 10Hz, the second stage running at 1Hz. This demonstration has been derived from a diode pumped fs laser system built at the University of Jena, Germany.

A photodiode picks up the oscillator 76MHz signal which is fed into the external clock/trigger input of a BME\_SG02 card. Using the fs-oscillator as the external clock 7 separately delayed outputs have to be fired synchronously to the arriving laser pulses with an allowed jitter of less than 0.5ns (actually the jitter is in this case only 50psec) and the output voltages fitted to specific needs of various devices.

The BME\_SG02 master card sets the base repetition frequency of 10Hz. The BME\_G05 slave cards have an output scaler that divides down the base repetition frequency of 10Hz by any integer number, in this case dividing it by 10 to get a repetition frequency of 1 Hz for the second amplifier. Thus it is possible to run the first amplifier at a repetition rate of 10Hz and the second at 1Hz without any additional device as well as exactly triggering further Pockels cells, pump lasers and instrumentation.

The timing of the laser system is as follows:

- a) Since the pumplaser of the 2. amplifier is a laser diode stack, it must be fired roughly 2msec before the laser pulse
- b) The flashlamp of the 1. amplifiers pumplaser must be fired 180usec in advance
- c) The Q-switch of the 1. amplifiers pumplaser must be fired 3usec in advance
- d) the timing of the pockels cells comes with the laser pulse and must be completely jitter free for optimum performance of the laser system

As an option, it is possible to use the 50Hz line signal to derive the 10Hz base repetition rate of the laser system. Synchronizing the 10Hz base repetition rate of the laser system to the 50Hz line frequency might be advantageous, if line voltage variations can effect the output stability of the laser system.

